INSTRUCTION MANUAL TRC-1480
Wireless Indoor and Outdoor Thermometer, Clock and Weather Station

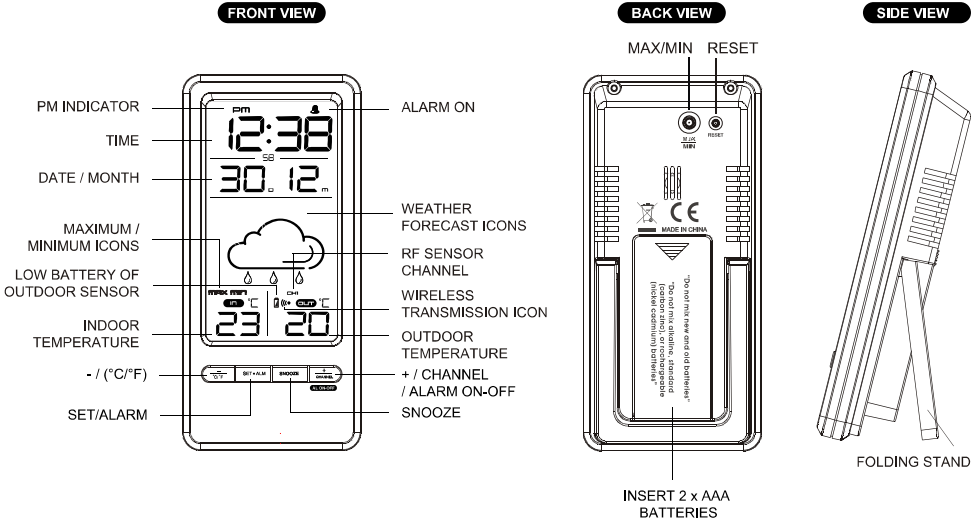

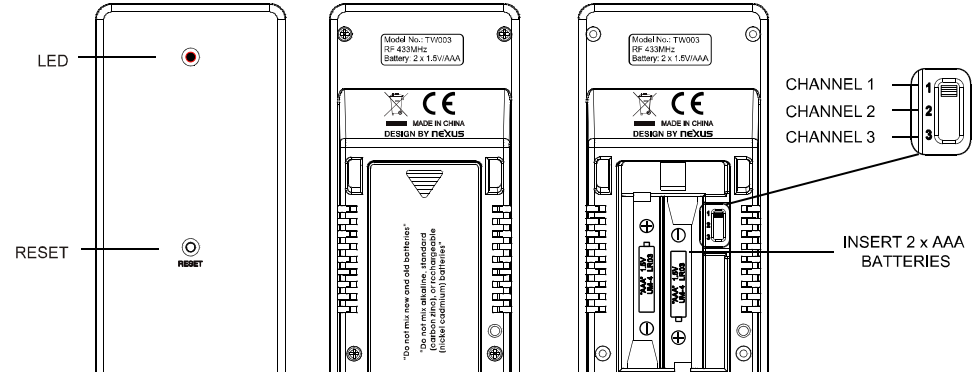

	SET / ALARM	
	SNOOZE	
	+ / CHANNEL / ALARM ON-OFF	
	OUTDOOR TEMPERATURE	
	WIRLESS TRANSMISSION ICON	
	RF SENSOR CHANNEL	
	WEATHER FORECAST ICONS	
	ALARM ON	
	REAR VIEW	
	MAX / MIN	
	RESET	
	INSERT 2 X AAA BATTERIES	
	SIDE VIEW	
	FOLDING STAND	
	OUTDOOR TEMPERATURE SENSOR	
	LED	
	RESET	
	STAND	
	INSERT 2 X AA BATTERIES	
	CHANNEL 1	
	CHANNEL 2	
	CHANNEL 3	

QUICK START GUIDE

1. Slide the battery cover at the rear of your indoor unit open.
2. Insert 2 x AAA batteries in the battery compartment; observe correct polarity (+/-) as printed inside the battery compartment.
3. Replace the battery cover. After a few seconds the LCD shows default time, calendar and current indoor temperature and starts to search for the outdoor temperature signal.
4. Insert 2 x AAA batteries in the outdoor sensor. The outdoor temperature will be displayed with “CH1” shown on the lower line of the LCD. Your indoor unit is synchronized with the outdoor sensor on Channel 1; the outdoor temperature is displayed.

Please note:
Your outdoor sensor has a transmission range of 30m with no obstructions. The actual transmission range can vary, depending on the signal path. Obstructions (roof, walls, floors, ceilings, trees, etc.)

format or “24 Hr” time format. When selecting “12 Hr”, the AM / PM icon will be displayed.

5. Press SET / ALM SET again, the time digits change to “00”, press +/- to select your time zone.

6. Press SET / ALM SET again, the time digits “0:00” show and the hour digits start flashing. Press +/- to set the hours.

7. Press SET / ALM SET again, the minute digits start flashing. Press +/- button to set the minutes.

8. Press SET / ALM SET to return to normal mode, or wait 30 seconds for the unit to return automatically.

SET ALARM

Press SET / ALM SET, the time digits change to the alarm time digits “AM 7:00 AL”. Press and hold SET / ALM SET for 2 seconds, the hour digits start flashing. Press +/- to set your desired alarm time hour.

Press SET / ALM SET again, the alarm minute digits start flashing. Press +/- to set the alarm minutes.

Press SET / ALM SET again, time digits change to “05” and start flashing. Press +/- to set the snooze duration between 1 and 20 minutes.

Press SET / ALM SET to return to normal mode, or wait 30 seconds for the unit to return automatically.

TURN ALARM ON OR OFF

Press SET / ALM SET to display the alarm time. When the alarm time is displayed, press + to turn on / off the daily alarm. When the alarm function is turned on, the icon appears between the hour and minute digits.

SNOOZE FUNCTION

When your alarm turns on, the clock sounds a beep to wake you up. The icon starts flashing.

1) Press SNOOZE to stop the alarm temporarily, the icon keeps flashing. The alarm will beep again after 5 minutes.

maximum values; the unit will start recording and displaying updated data again.

When minimum indoor/outdoor temperature and humidity are displayed, press and hold MIN to clear the minimum values; the unit will start recording and displaying updated data again.

USE INSTRUCTIONS FOR THE WEATHER STATION
There are four types of weather display on your weather station:

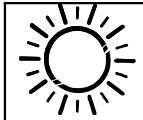	SUNNY
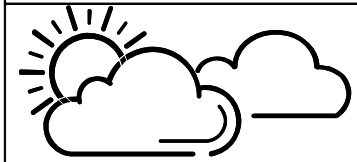	SUNNY AND CLOUDY
	CLOUDY
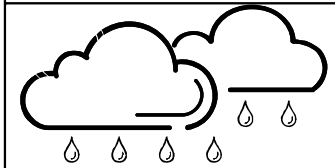	RAINY

Please note: For better use of your weather station, place it in a location with air circulation, e.g. close to an open window. Placing it in an air-conditioned environment will affect its accuracy.

After your weather station is powered up, it will take around 24 hours to stabilize. The weather icons on the display give reference to the next 6-12 hours weather conditions. It may not match with the current weather condition outside.

TROUBLESHOOTING

1. In case your indoor unit shows irrelevant information or digits, it may be affected by electrostatic discharge or interferences from other devices. Press RESET on the rear of the unit. Your unit will be reset to the factory settings (time and calendar) and you need to set time and calendar again.

2. In case the outdoor temperature shows "--":

   2.1 Press + / CHANNEL (ALM On-Off) to display the correct channel, "CH1" is your default channel;
   2.2 If the outdoor temperature shows "CH1", press and hold + / CHANNEL (ALM ON-OFF) for 2 seconds. The outdoor temperature will be displayed in approx 1 minute;
   2.3 If above procedures do not work, repeat 2.2), bring in the outdoor sensor and press RESET on the outdoor sensor.

Please note: If you observe a "Low Battery" icon on the lower left side of the LCD (which means your outdoor sensor has a low battery level), replace the batteries of the sensor.

CARE AND MAINTENANCE

1. Do not expose the unit to extreme temperatures, water or direct sunlight.
2. Avoid contact with corrosive materials.
3. Do not subject the unit to excessive force, dust or humidity.
4. Do not open the casing or tamper with components of the unit.

SPECIFICATIONS

Indoor Temperature Range	-10°C to +50°C (+14.2°F to +122°F)
Outdoor Temperature Range	-50°C to + 70°C (-58°F to +158°F)
Out of Range Display	Temperature: HH.H / LL.L
Outdoor Temperature Interval	1 minute
Temperature Resolution	0.1°C
Alarm Duration	2 minutes
Transmission Frequency	433Mhz
Transmission Distance	Up to 30 meters (no obstructions)

Electric and electronic equipment and included batteries contains materials, components and

ALL RIGHTS RESERVED
COPYRIGHT DENVER ELECTRONICS A/S
WWW.DENVER-ELECTRONICS.COM